Government Supported Wireless Service

Samsung M320
Cellular Phone

This is your
User's Guide

If you have additional questions, please feel free to call customer service toll free at **1-800-550-0237** and visit us online at **www.StandUpWireless.com** and click the "**LEARN**" tab.

Thank you for Standing Up!

1.800.544.4441
www.StandUpWireless.com

StandUP WIRELESS

Samsung M320
User's Manual

Phone Features

Color Display • Text Messaging • Caller ID • Call Waiting
Voice Mail • Camera • Bluetooth

Key Functions

1. Earpiece lets you hear the caller and automated prompts.

2. Signal Strength Indicator represents the signal strength by displaying bars. The more bars displayed, the better the signal strength.

3. Main LCD (display) displays all the information needed to operate your phone, such as the call status, the Contacts list, the date and time, and the signal and battery strength.

4. Navigation Key scrolls through the phone's menu options and acts as a shortcut key from standby mode.
   Press Up to access Missed Alerts.
   Press Down to access My Content.
   Press Right to launch the Web.
   Press Left to launch Send Text Message.

5. Softkey (left) lets you select softkey actions or menu items corresponding to the bottom left line on the Main LCD.

6. MENU/OK lets you access the phone's menus and selects the highlighted choice when navigating through a menu.

7. TALK Key allows you to place or receive calls, answer Call Waiting, use Three-Way Calling, or activate Voice Dial.

8. BACK Key deletes characters from the display in text entry mode. When in a menu, pressing the Back key returns you to the previous menu. This key also allows you to return to the previous screen in a data session.

9. Keypad lets you enter numbers, letters, and characters, and navigate within menus. Press and hold keys 0–9 for speed dialing.

10. Microphone allows other callers to hear you clearly when you are speaking to them.

11. END/POWER Key lets you turn the phone on or off, end a call, or return to standby mode. While in the main menu, it returns the phone to standby mode and cancels your input. When you receive an incoming call, press to enter silent mode and mute the ringer.

12. Softkey (right) lets you select softkey actions or menu items corresponding to the bottom right line on the Main LCD.

13. Battery Strength Indicator represents the amount of remaining battery charge currently available in your phone. When all bars are displayed in the battery icon, the phone's battery is fully charged. When no bars are displayed, the phone's battery is completely discharged or empty.

14. Camera Lens, as part of the built-in camera, lets you take pictures and videos.

15. Volume Button allows you to adjust the ringer volume in standby mode (with the phone open) or adjust the voice volume during a call. The volume key can also be used to scroll up or down to navigate through the different menu options.

16. Sub LCD lets you monitor the phone's status and see who's calling without opening the phone.

17. Charger/Accessories Jack allows you to connect a USB cable. CAUTION! Inserting an accessory into the incorrect jack may damage the phone.

18. Headset Jack allows you to plug in either a stereo headset (included) or an optional headset for convenient, hands-free conversations. CAUTION! Inserting an accessory into the incorrect jack may damage the phone.

19. Side Camera Button lets you activate the camera and video mode and take pictures and videos.

Turning Your Phone On and Off

Turning Your Phone On

Press End

Once your phone is on, it may display "Searching for Service." When your phone finds a signal, it automatically enters standby mode – the phone's idle state. At this point, you are ready to begin making and receiving calls. In Power Save mode, your phone searches for a signal periodically without your intervention. You can also initiate a search for Sprint service by pressing any key (when your phone is turned on).

Turning Your Phone Off

Press End
Press and hold for two seconds until you see the powering down animation on the display screen. Your screen remains blank while your phone is off (unless the battery is charging).

Using Your Phone's Battery and Charger

Battery Capacity
Your phone is equipped with a Lithium Ion (Li-Ion) battery. It allows you to recharge your battery before it is fully drained. The battery provides up to 3.5 hours of continuous digital talk time. When the battery reaches 5% of its capacity, the battery icon blinks. When there are approximately two minutes of talk time left, the phone sounds an audible alert and then turns off.

1. Remove the battery cover (located on the back of the phone) by pressing down on the raised ridge while sliding the cover in the direction of the arrow (1).

2. Carefully lift the battery cover away from the phone (2).
3. Slide the battery into the compartment so that the tabs on the end align with the slots at the bottom of the phone, making sure to line up the gold contacts (3).

4. Gently press down on the battery until it snaps into place (4).

5. Replace the cover by lining up the tabs and sliding the cover up until it snaps into place. Check that the battery is properly installed before turning on the phone.

Removing the Battery
1. Follow steps 1 and 2 from "Installing the Battery"
2. Grip the battery at the top end (1) and pull it up and out (2).

Charging the Battery
Your phone's Li-Ion battery is rechargeable and should be charged as soon as possible so you can begin using your phone.

Keeping track of your battery's charge is important. If your battery level becomes too low, your phone automatically turns off, and you will lose any information you were just working on. For a quick check of your battery level, glance at the battery charge indicator located in the upper-right corner of your phone's display screen. If the battery charge is getting too low, the battery icon blinks and the phone sounds a warning tone.

Using the Phone Charger
Plug the flat end of the charger into the phone's charger jack and the other end into an electrical outlet.

- A red indicator light means the battery is charging.

- A charging icon located in the top right corner of the outside LCD lets you know the battery is charging.

- A green indicator light means the battery is fully charged.

Making and Answering Calls

Making Calls
Placing a call from your wireless phone is as easy as making a call from any landline phone. Enter the number, press Talk , and you're on your way to clear calls.

1. Make sure your phone is on.

2. Enter a phone number from standby mode. (If you make a mistake while dialing, press Back to erase the numbers.)

3. Press Talk. (To make a call when you are roaming and Call Guard is enabled, press and then press 1.

4. Press End or close the phone when you are finished.

Answering Calls
1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)

2. Press Talk to answer an incoming call.
Your phone notifies you of incoming calls in the following ways:

- The phone rings or vibrates.
- The backlight illuminates.
- The screen displays an incoming call message.

If the incoming call is from a number stored in your Contacts, the entry's name is displayed. The caller's phone number may also be displayed, if available.

Taking Pictures
Taking pictures with your phone's built-in camera is as simple as choosing a subject, pointing the lens, and pressing a button. You can activate the phone's camera mode whether the phone is open or closed.

To take a picture with the phone open:

1. Press Menu > Pictures > Camera to activate camera mode. (Additional camera options are available through the camera mode Options menu.

2. Using the phone's main display screen as a viewfinder, aim the camera lens at your subject.

3. Press Capture (left softkey or the side camera button until the shutter sounds. (The picture will automatically be saved in your selected storage area.)

4. Once you've taken your picture, press Next (right softkey) for more options:
Send Pic to send the picture to up to 10 contacts at one time. (See page 97 for details.)
Upload to upload the picture you just took to the Sprint Picture Mail Web site (www.sprint.com/picturemail). Depending on your settings, you may be prompted to accept a data connection.
Assign to assign the picture as a Picture ID, Screen Saver, or Incoming Call.
Erase to delete the picture you just took.
Camera Mode to return to the camera to take additional pictures. Review Pictures to go to the My Pictures folder to review your saved pictures.

To return to camera mode to take another picture, press the camera button.

4. Once you've taken your picture, press Next (right softkey) for more options:

• Send Pic to send the picture to up to 10 contacts at one time.

• Assign to assign the picture as a Picture ID, Screen Saver, or Incoming Call.

• Erase to delete the picture you just took.

• Camera Mode to return to the camera to take additional pictures.

• Review Pictures to go to the My Pictures folder to review your saved pictures.

Bluetooth Status Indicators
The following icons show your Bluetooth connection status at a glance

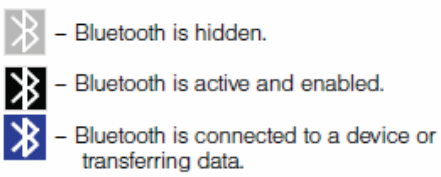

Using Voicemail

Setting Up Your Voicemail
All unanswered calls to your phone are automatically transferred to your voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your voicemail and personal greeting as soon as your phone is activated.

1. Press and hold 1 .

2. Follow the system prompts to:
- Create your passcode.
- Record your name announcement.
- Record your greeting.
- Choose whether to activate One-Touch Message Access (a feature that lets you access messages simply by pressing and holding 1, bypassing the need for you to enter your passcode).

Voicemail Notification
There are several ways your phone alerts you to a new message:
• By displaying a message on the screen.
• By sounding the assigned ringer type.
• By the LED blinking red.
• By displaying "mail symbol" at the top of your screen.

New Voicemail Message Alerts
When you receive a new voice message, your phone alerts you and prompts you to call your voicemail.

To call your voicemail:
• Press and hold 1.

Retrieving Your Voicemail Messages
You can review your messages directly from your wireless phone or from any other touch-tone phone. To dial from your wireless phone, either speed dial your voicemail or use the menu keys.

Using One-Touch Message Access
Press and hold 1. (Your phone will dial your voicemail box.)

Using the Menu Keys on Your Phone to Access Your Messages
1. Press Menu > Messaging > Voicemail.
2. Highlight Call Voicemail and press Talk to listen to your messages.

Using Another Phone to Access Messages
1. Dial your wireless phone number.
2. When your voicemail answers, press #.
3. Enter your passcode.

Using SMS Text Messaging
With SMS Text Messaging, you can send and receive instant text messages between your wireless phone and another messaging-ready phone. When you receive a new message, it will automatically display on your phone's screen. In addition, SMS Text Messaging includes a variety of preset messages, such as "I'm running late, I'm on my way," that make composing messages fast and easy. Use your phone to customize your own preset messages (up to 160 characters).

Composing SMS Text Messages
1. Press Menu > Messaging > Send Message > Text Message and select the entry method you prefer:
• Go to Contacts to select a recipient from your
• Contacts (qualifying Contacts entries must contain a wireless phone number or an email address).
• Mobile to use the keypad to enter a wireless phone number directly
• Email to enter the recipient's email address.

2. Press Next (left softkey) when you have finished entering recipients. (You may include up to 10 recipients per message.)

3. Enter a message or use the preset messages or smileys (icons).
• To type a message, use your keypad to enter your message. Use the Options (right softkey) to select an input mode.
• To use a preset message or a smiley, press Options (right softkey), select Emoticons or Preset Msg, and then select a message or emoticon and press Menu/OK .

4. Review your message and select Next (left softkey). (You may select additional messaging options by pressing Options (right softkey) to set the callback number or the message priority (Normal or Urgent).)

5. Press Send (left softkey) to deliver your message.

Accessing SMS Text Messages

To read an SMS Text message:

• When you receive a text message, it will be displayed automatically on your phone's screen. Use your navigation key to scroll down and view the entire message.